

PARTS LIST

for



30" ELECTRIC BUILT-IN DOUBLE OVEN

CONTINUOUS CLEAN LOWER OVEN
SELF-CLEAN UPPER OVEN

MODEL
RB275PXV-1



FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



Whirlpool CORPORATION
Benton Harbor, Michigan.

© 1990 WHIRLPOOL CORPORATION


11-90 Litho in U.S.A.

Part No.884859 Rev.A

925-E-12

CONTROL PANEL PARTS

For Model: RB275PXV-1

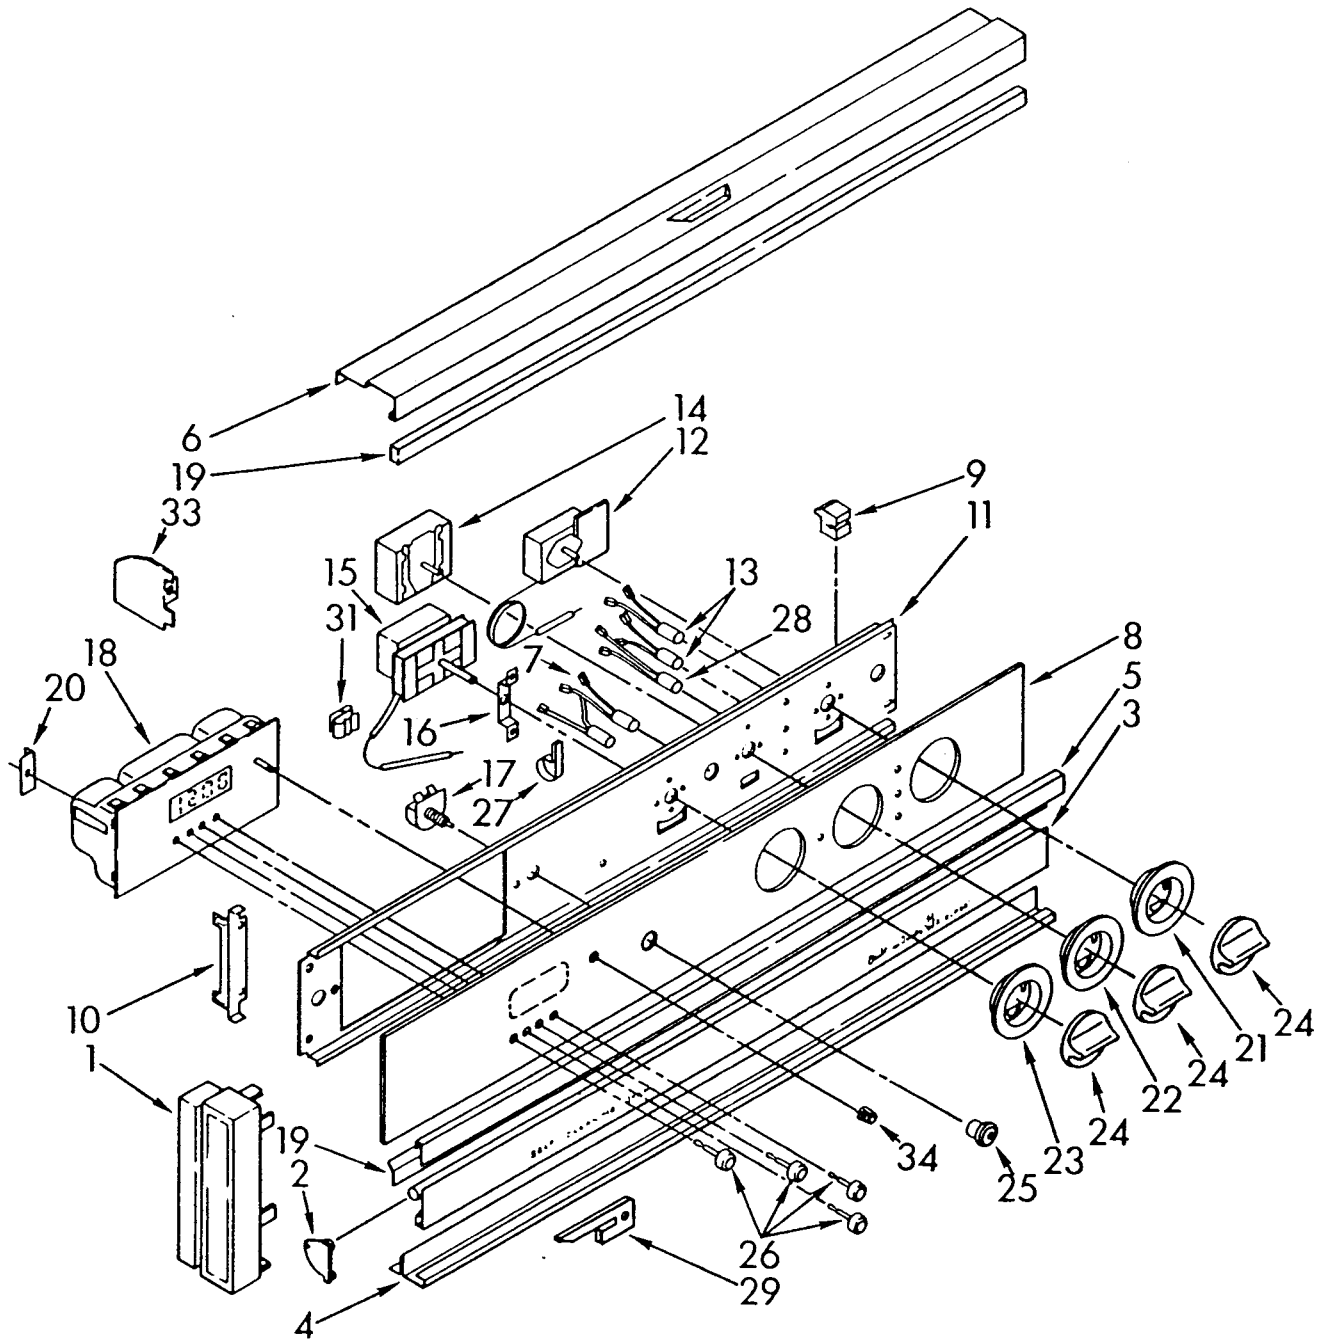

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.


1		End Cap	
	3148622	Right Side	
	3148621	Left Side	
2		End Trim, Vent	
	3148697	Right Side	
	3148698	Left Side	
3	3148617	Door, Vent	
4	3148618	Trim, Bottom	
	342043	Screw (2)	
5	3148619	Trim, Center	
	342043	Screw (2)	
6	3148624	Trim, Top	
	342055	Screw (2)	
7	3148807	Light, Indicator (Double)	
8	3148637	Control Panel, Glass	
9	3149882	Retainer, Glass (4)	
10	3148635	Bracket, Control Panel (2)	
	98520	Screw (4)	
11	330500	Control Bracket	
12	3148934	Thermostat, Oven Pyro	
	98997	Clip	
	313808	Screw, 6-32 x 9/32 (2)	
13	311802	Indicator Light (2)	
14	310006	Selector Switch	
	155023	Screw, 8-32 x 1/4 (2)	
15	311479	Thermostat, Oven Continuous Clean	
16	311492	Bracket, Thermo	
	311491	Screw (4)	
	313808	Screw, 6-32 x 9/32 (2)	
17	312581	Switch, Oven Light	
	312796	Lockwasher	
18	3149806	Timer, Digital	
19	311263	Seal, Top Rail	
20	313864	Bracket, Timer	
	98520	Screw, 8A x 5/16 (2)	
21	311066	Escutcheon, Thermostat	
22	311068	Escutcheon, Selector Switch	
23	311067	Escutcheon, Thermostat (Lower Oven)	
	254225	Screw, 8 x 1/4	
24	3150371	Knob, Control (3)	
25	313030	Bezel Switch (1)	
26	313958	Set Button (4)	
27	308609	Strain Relief (3)	
	98520	Screw, 28 3148720 Light, Indicator	
29	3149142	Shield, Air	
	3148107	Screw (2)	
31	313570	Clip, Tube (Thermostat)	
32	311263	Seal, Backguard	
33	314129	Bracket, Timer	
	98520	screw, 8A x 5/16 (2)	
34	313523	Knob, Bit Generator	

FOLLOWING PARTS NOT ILLUSTRATED LITERATURE PARTS

LIT3148599	Tech Sheet
LIT311509	Installation Instructions
LIT3148318	Use & Care Guide
LIT313358	Cookbook
LIT884859	Repair Parts List

For Model: RB275PXV-1

 For Model: RB275PXV-1



NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172204	Frame Front
2	307985	Pin, Hinge Ear (2)
3	3148669	Switch, Safety
	313489	Screw (2)
4	308306	Pushnut (2)
5	3172450	Oven, 30" Pyro
	311056	Screw (3)
6	310713	Bracket, Oven Mounting (2)
	343641	Screw, 10-16 x 1/2 (6)
7	257314	Plug Button
8	313382	Clip, Therm Bulb (2)
9	310770	Insulation Tray
	3148107	Screw, 8 x 1/2 (2)
10	311774	Support, Side Wrapper (4)
	3148107	Screw, 8 x 1/2 (4)
11		Side Wrapper
	311005	Right Side
	311008	Left Side
	3148107	Screw, 8 x 1/2 (4)
12		Hinge Ear
	328801	Right Side
	328802	Left Side
13	310659	Plate (2) (Side Panel)
	308544	Screw, 10-24 x 1/2 (4)
14	329713	Channel Arm (2)
15	307986	Pin, Hinge (2)
16	307594	Retainer Ring (2)
17	308125	Anchor Spring (2)
18	308126	Spring, Oven Door (2)
19	310836	Vent, Extension (2)
20	310839	Eliminator, Smoke
	343641	Screw, 10-16 x 1/2
21	310662	Plate Cover
	3148107	Screw, 8 x 1/2 (2)
22	660576	Unit, Bake
	3150532	Screw, 8 x 1/2 (2)
23	660579	Unit, Broil
	3150532	Screw (2)
	312318	Screw (4)
24	660556	Socket, Oven Light
	308043	Screw, 10-12 x 7/8 (2)
25	311255	Bulb, Oven Light
26	308039	Cover, Oven Light
27	308038	Retainer, Oven Light
28	310693	Baffle, Top Insulation
	3148107	Screw, 8 x 1/2 (2)
29	3171148	Latch Assembly
	3148107	Screw, 8 x 1/2 (4)
30	308185	Safety Switch
	98106	Screw (2)
31	309245	Insulator, Switch
32	313035	Terminal, Shield
	309258	Screw, 6 x 3/8B (2)
33	310825	Latch, Handle
	308422	Screw, 10-24 x 1/2 (2)


34	311253	Knob, Latch Handle
	246135	Screw, 80 x 5/16
35	310345	Switch, Door
37	314209	Switch, Percentage Broil
38	314210	Switch, Bake
39	258076	Terminal Block
	112432	Nut (3)
	308043	Screw, 10-12 x 7/8
40	310458	Cover, Top
	3148107	Screw, 8 x 1/2 (4)
41		Side Trim
	310686	Left Side
	310690	Right Side
42	3149542	Panel, Back (2)
	3148107	Screw, 8 x 1/2 (6)
43	329019	Hood, Lower Vent
	309133	Screw, 10A x 1/2 Black (3)
44	311582	Stand Off
	3148107	Screw, 8 x 1/2
45	3147845	Pan, Broiler
46	3147563	Grid, Broiler
47	308173	Rack, Oven Straight
	308172	Rack, Oven Offset
48	311011	Cover, Rear
	3148107	Screw, 8 x 1/2 (9)
49	3147864	Insulator, Switch
50	309111	Snubber, Door (2)
54	310719	Bracket, Control Panel Mounting (2)
	3148107	Screw, 8 x 1/2 (4)
	342055	Screw (4)
56	311982	Coverplate
	313638	Screw (2)
57	3148284	Seal, Door

FOLLOWING PARTS NOT ILLUSTRATED INSULATION

310433	Insulation, Wrap
310434	Insulation, Oven
3149328	Insulation, Top

LOWER OVEN PARTS

For Model: RB275PXV-1

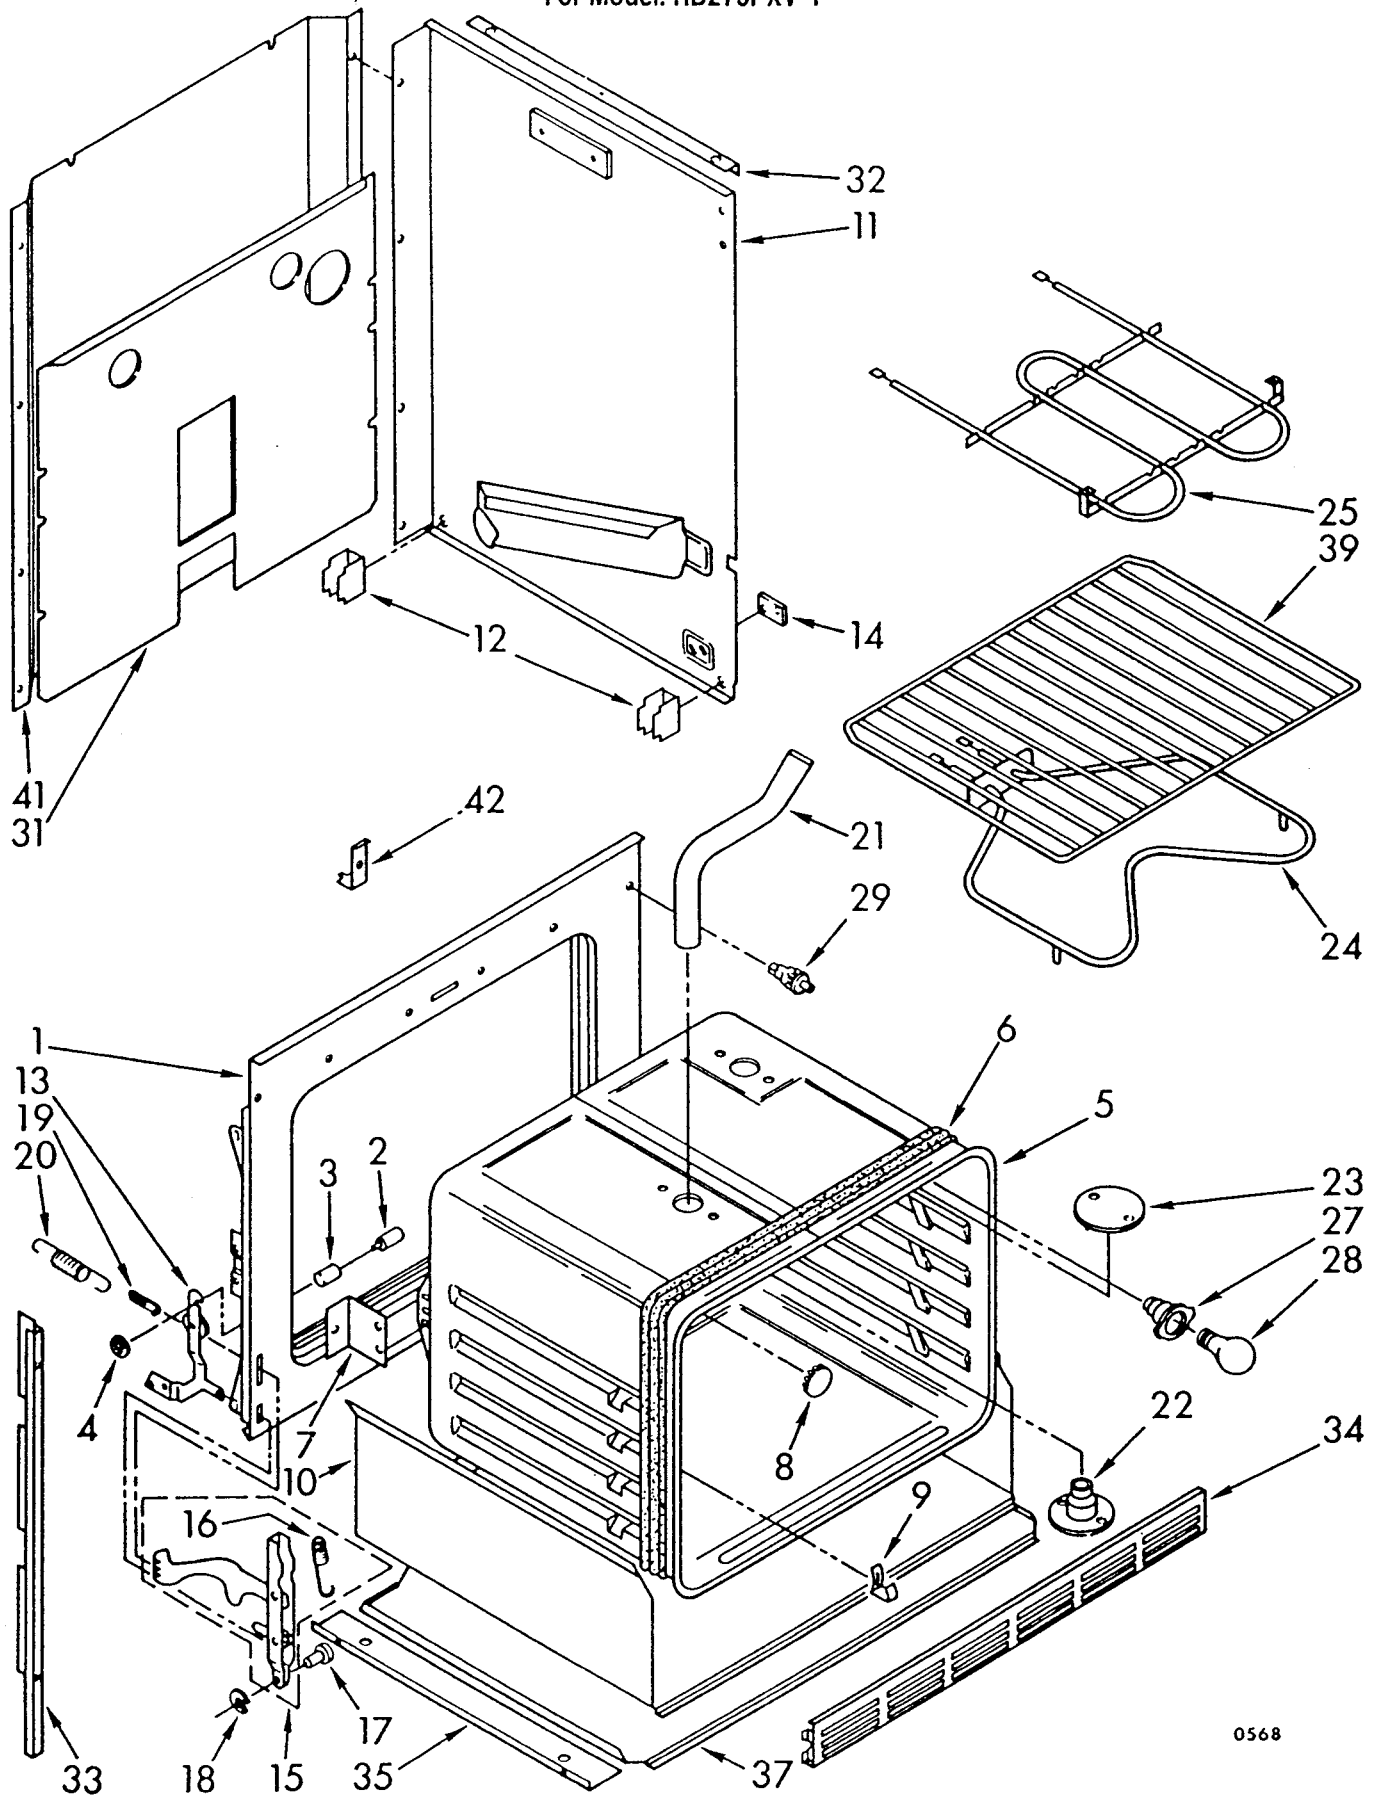

0568

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

884859

6

925-F-3

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172196	Frame, Front
2	307985	Pin, Hinge Ear (2)
3	309111	Snubber, Door (2)
4	308306	Pushnut (2)
5	328757	Oven, 30" Continuous Clean
	311056	Screw (3)
6	309107	Heat Seal
7	310713	Bracket, Oven Mounting (2)
	343641	Screw (6)
8	257314	Plug Button
9	313382	Clip, Therm Bulb (2)
10	310770	Insulation Tray
	3148107	Screw, 8 x 1/2 (2)
11		Side Wrapper
	311007	Right Side
	311010	Left Side
12	311774	Support, Side Wrapper (4)
	3148107	Screw, 8 x 1/2 (8)
13		Hinge Ear
	328801	Right Side
	328802	Left Side
14	310659	Plate, Side Panel (2)
	308544	Screw, 10-24 x 1/2 (4)
15	329714	Channel Arm (2)
16	311092	Spring, Door Stop (2)
17	307986	Pin Hinge
18	307594	Retainer, Ring
19	311897	Anchor, Spring (2)
20	308127	Spring, Oven Door (2)
21	311259	Tube, Lower Vent
	343641	Screw, 10-16 x 1/2
22	310840	Eliminator, Smoke
	3148107	Screw, 8 x 1/2 (2)
23	310662	Plate Cover
	3148107	Screw, 8 x 1/2 (2)
24	660576	Unit, Bake
	3150532	Screw, 10-32 x 5/8 (2)
25	660579	Unit, Broil
	3150532	Screw, 10-32 x 5/8 (2)
27	660556	Socket, Oven Light
	308043	Screw, 10-12 x 7/8 (2)
28	311255	Bulb, Oven Light
	308043	Screw (2)
29	310345	Switch, Door
31	3149542	Panel, Back
	3148107	Screw, 8 x 1/2 (6)
32	255095	Angle Support (2)
	3148107	Screw, 8 x 1/2 (4)
33		Side Trim
	310685	Left Side
	310689	Right Side
	3148107	Screw, 8 x 1/2
34	310668	Grill, Bottom
	309029	Screw, 8-15 x 1/2 Black (3)
35	311592	Angle Support (2)


	3148107	Screw, 8 x 1/2 (4)
37	310458	Cover, Bottom
	3148107	Screw, 8 x 1/2 (4)
39	308173	Rack, Oven Straight
41	311013	Cover, Rear
	3148107	Screw, 8 x 1/2 (11)
42	309102	Bracket, Stand Off

FOLLOWING PARTS NOT ILLUSTRATED INSULATION

310433	Insulation, Wrap
310434	Insulation, Oven

LOWER OVEN DOOR PARTS

For Model: RB275PXV-1

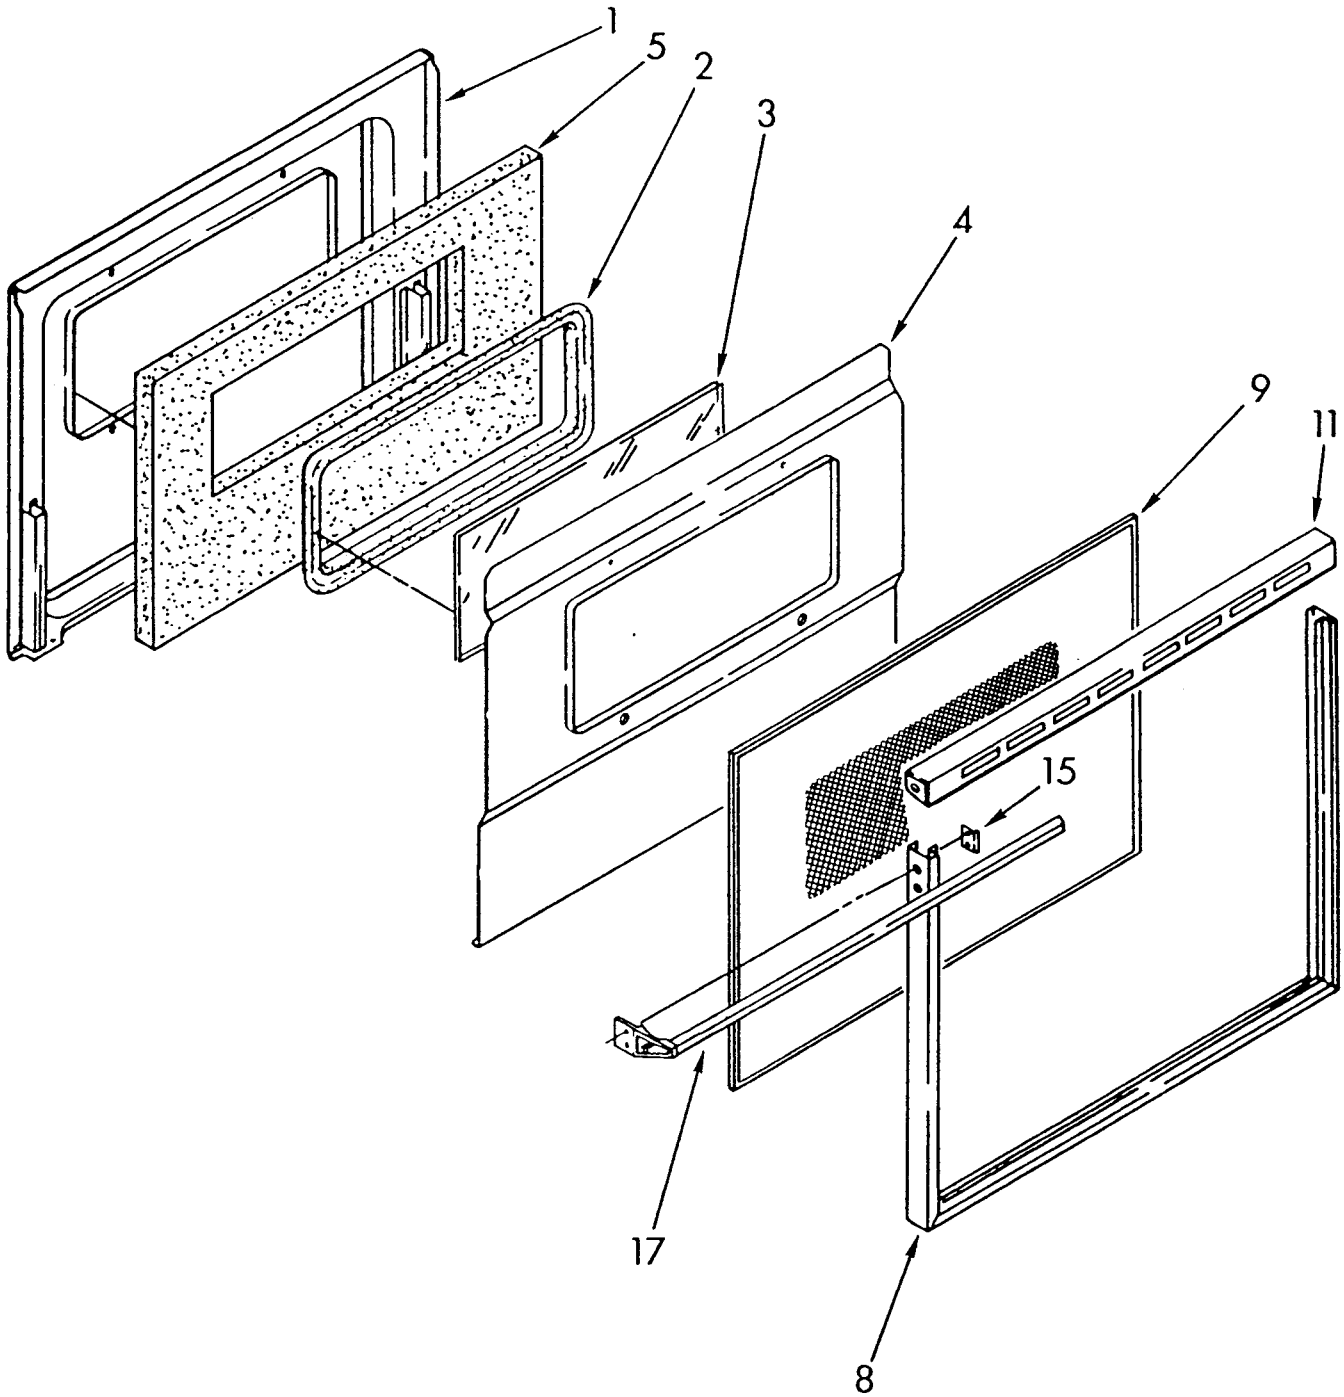

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3170710	Liner, Door
	3148107	Screw, 8 x 1/2 (3)
	311056	Screw (4)
2	3148183	Seal, Pano Glass
3	3148179	Glass, Inner 30"
4	3148287	Retainer, Insulation
	3148443	Screw (6)
5	3147951	Insulation, Door
8	3148235	Frame, Door 30"
9	3148185	Glass, Outer
11	3148223	Top, Door Frame
15	3148282	Clip (2)
17	3148228	Handle, Oven Door
	355515	Screw, Handle (2)
	3149333	Screw (5)

SPLICING WIRES-25 FT. LENGTH

242828	Wire, Black 12 Ga. 150 o C
242820	Wire, Black 14 Ga. 150 o C
242821	Wire, Blue 14 Ga. 150 o C
242822	Wire, Brown 14 Ga. 150 o C
242830	Wire, Brown 14 Ga. 200 o C
242823	Wire, Green 14 Ga. 150 o C
242824	Wire, Orange 14 Ga. 150 o C
242829	Wire, Red 12 Ga. 150 o C
242825	Wire, Red 14 Ga. 150 o C
242831	Wire, Red 14 Ga. 200 o C
242826	Wire, White 14 Ga. 150 o C
242827	Wire, Yellow 14 Ga. 150 o C
242832	Wire, Yellow 14 Ga. 200 o C

REFINISHING MATERIAL


261810	Touch-Up Oven (1 Oz.)
261582	Grease

ACCESSORY PARTS

261881	Rotisserie (Top Oven Only)
241430	Foil, Aluminum Oven (18" x 25')

UPPER OVEN DOOR PARTS

For Model: RB275PXV-1

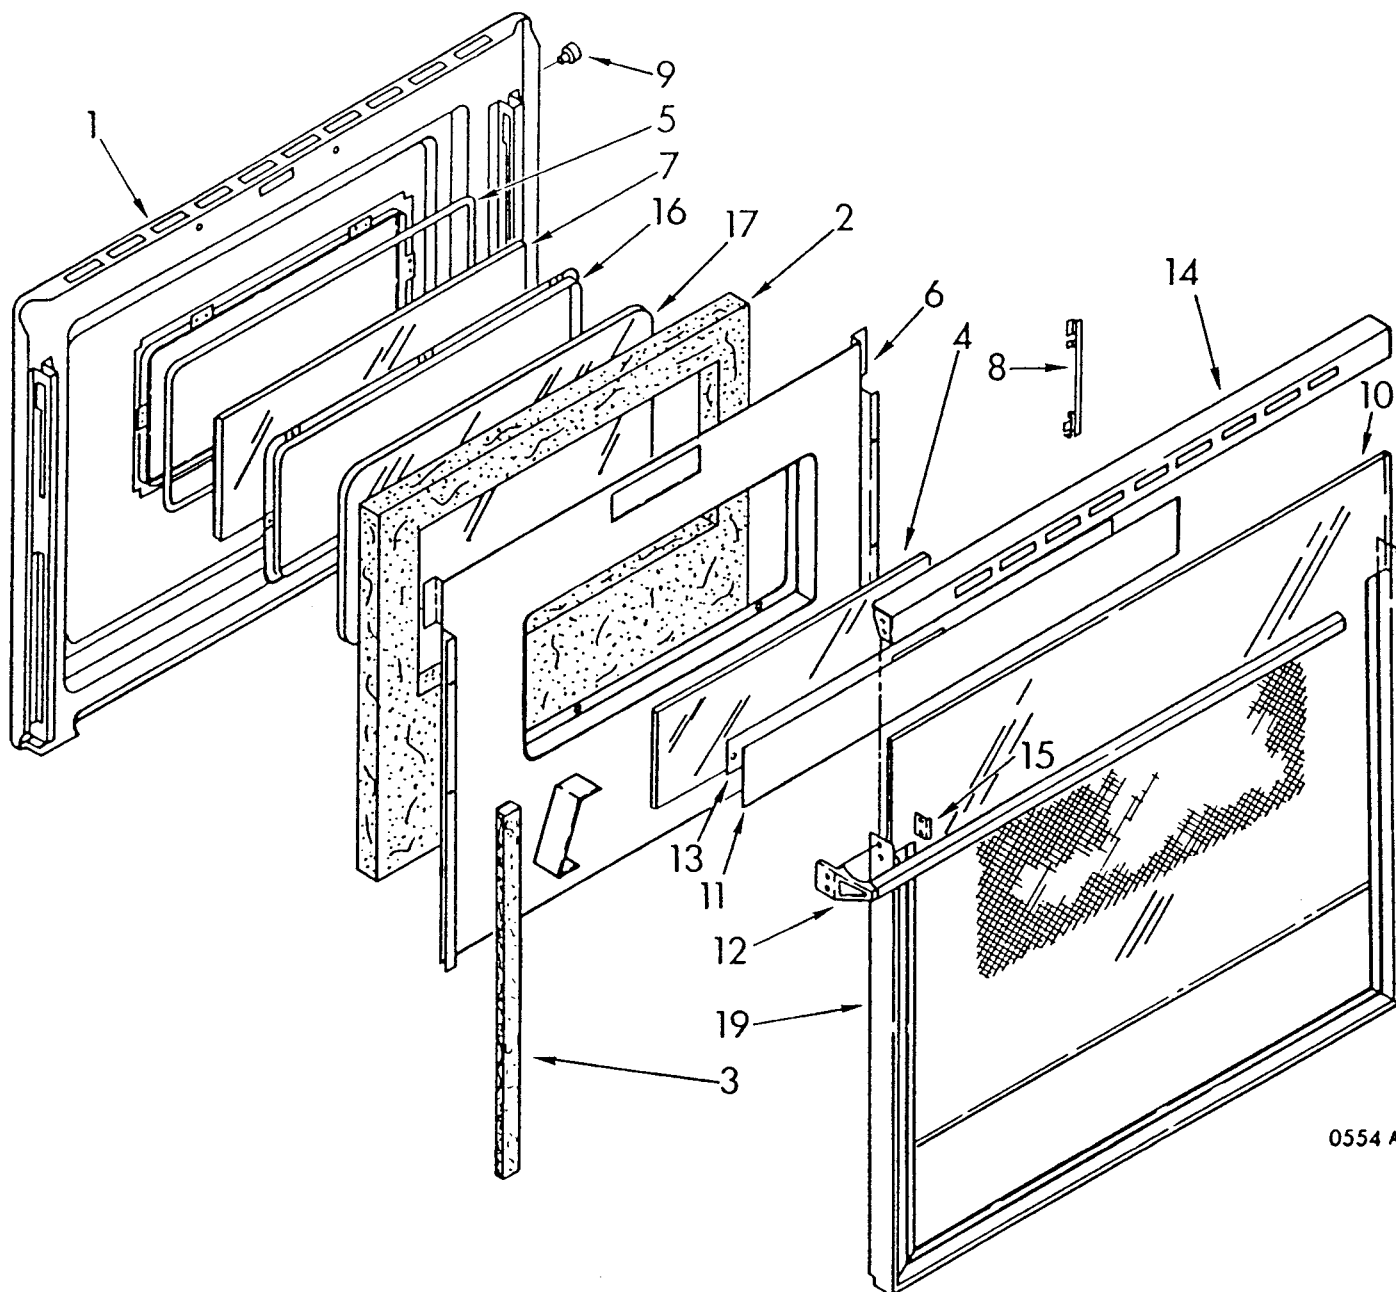

0554 A


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172218	Liner, Door	
	3148107	Screw, 8 x 1/2 (6)	
	311056	Screw (2)	
2	3147951	Insulation, Door	
3	3148441	Seal, Flange (2)	
4	3148178	Glass, Reflective	
5	3148183	Seal, Window	
6	3148159	Retainer, Insulation	
	3148443	Screw (4)	
7	313004	Glass, Inner	
8	3148187	Retainer, Glass (2)	
9	3148182	Bumper (4)	
10	3148185	Glass, Panel	
11	3148184	Foil, Door	
12	3148228	Handle, Door	
	355515	Screw (4)	
13	3148680	Shield, Door	
	254225	Screw, 14	3148223 Trim, Panel
15	3148282	Clip, Mtg. (2)	
16	3148234	Frame, Inner Glass	
	3148443	Screw (6)	
17	313005	Glass, Outer	
19	3148235	Frame, Glass Panel	
	3149333	Screw (5)	

WIRING HARNESS PARTS

For Model: RB275PXV-1

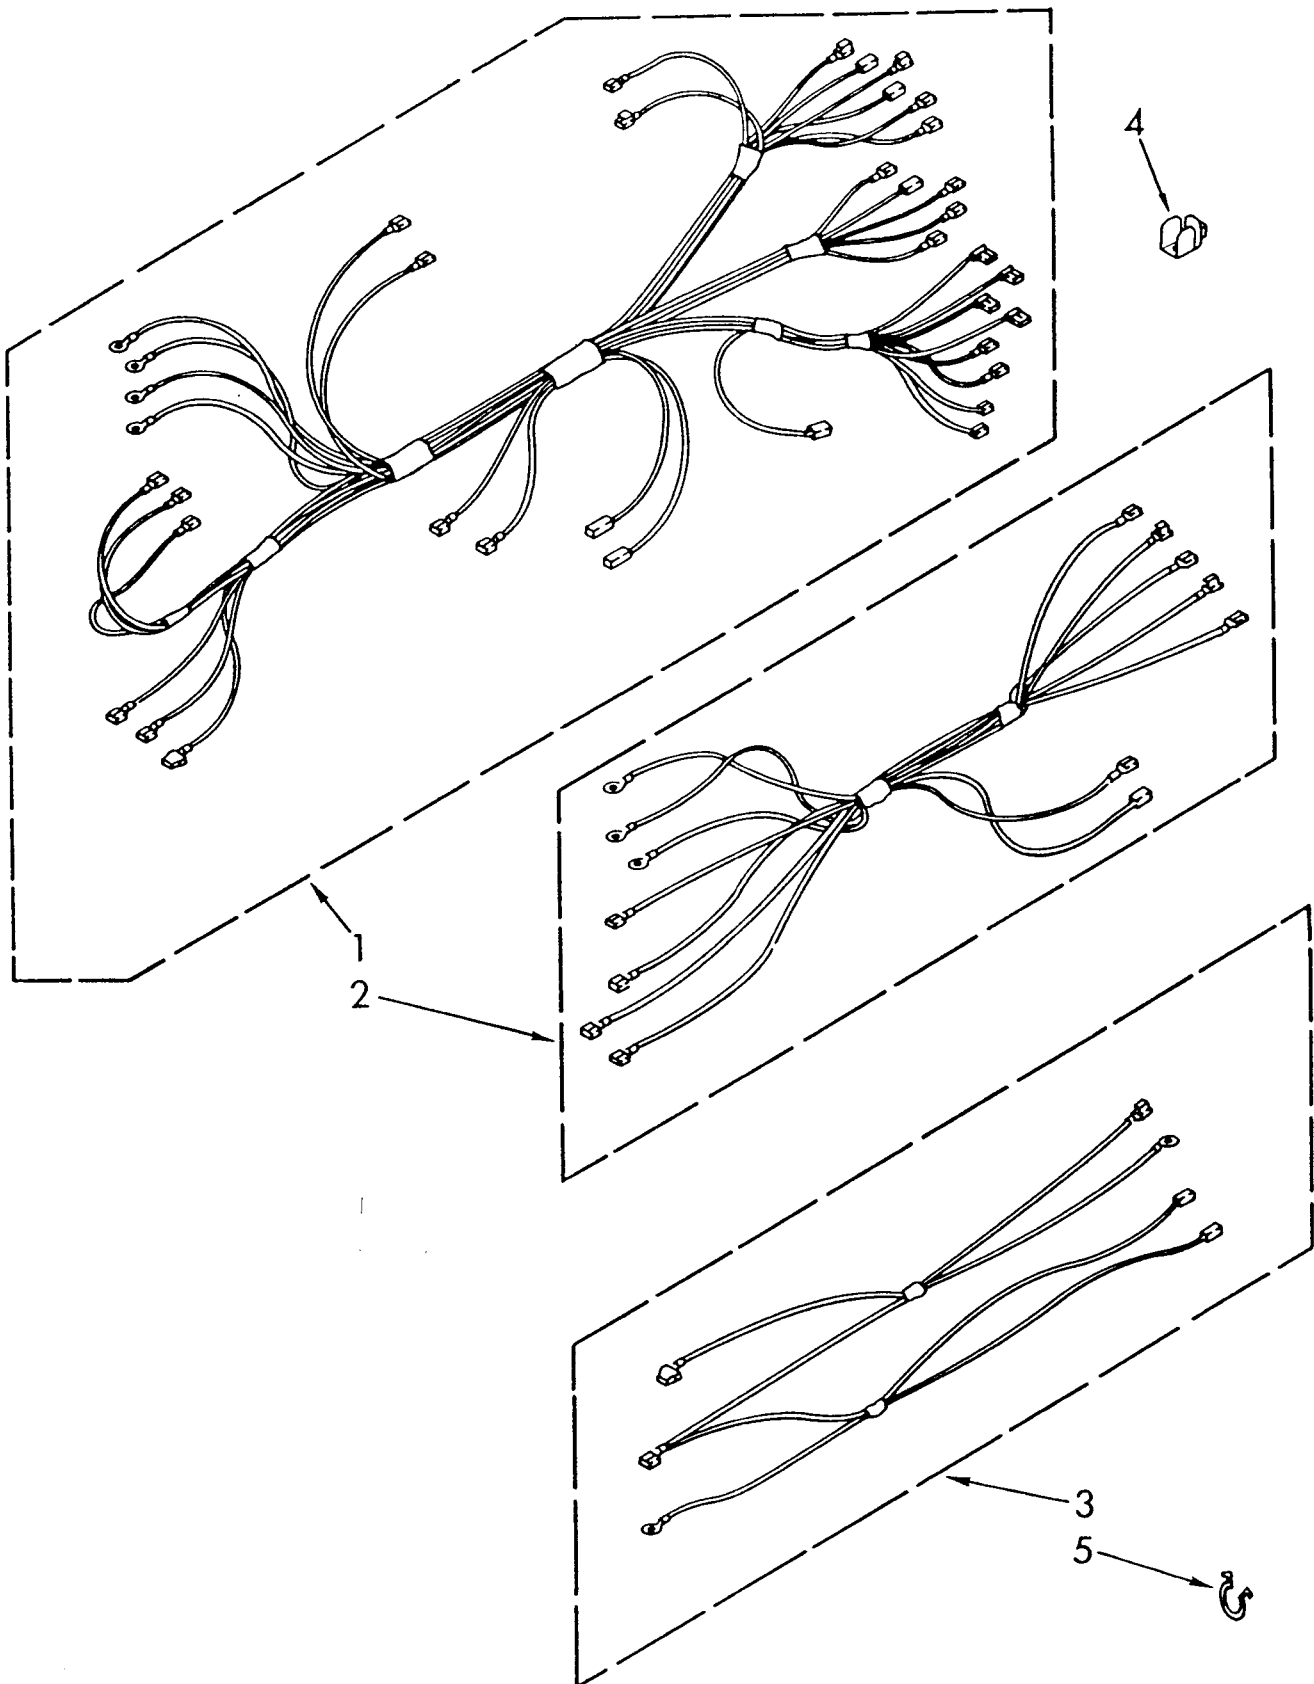

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	3148595	Harness, Wire (Main)
2	3148824	Harness, Wire (Lower Oven)
3	311471	Harness, Wire (Oven Light)
4	3147832	Adapter, 3-Way Terminal
5	313438	Clip, Harness